


ERECTION INSTRUCTIONS FOR DANDY 4 AND REGENCY

- 1) Level trailer by adjusting on the prop-stand or jockey wheel if fitted. Apply hand brake.
- 2) Pull out jacks to full extent and drop. If on soft ground press jack into ground with foot before tightening. Remove trailer cover. Put on ground on right so that the roof will drop on it to keep it clean.
- 3) Drop roof onto the ground to the right side looking from the rear of the Dandy. Before lifting the bed make sure the nylon ropes are fixed to the roof fastening cleats. Open the first bed, when it reaches the vertical position it will start to lift the roof, then open the other bed again checking that the nylon ropes are fixed to the cleats. ~~When this bed is open you must lift the top half of the tubes at each end until it sits on the spring button. (This instruction only applies to the Dandy 4).~~ If it is raining, or windy temporarily hook one or two of the roof elastics on their respective hooks to keep the roof spread out over the side of the bed.
- 4) Lift up door section with your assistant at the front giving you a hand. Open the door immediately with one hand and while the door is open this section cannot fall. Take roof pole, lift front section slightly and fit pole into socket, using the pole to push up the front section. Step on to rear section of trailer and hook the pole into socket over the door. Then fix the steady tube from the tow bar. Release cords from the cleats, push inwards the tubes that raised the roof until they fit onto the retainers fixed on the back of the sections. Lift the sink unit from the rear corner, make sure the waste pipe connects into the lower waste pipe. (The sink unit must always be placed in the right rear corner when folding).
- 5) Step outside. Release the catches on the bedside panel of the left-hand bed lift this then lift the headboard so that they fit together with the sideboard holding the headboard through the clip attached to the headboard, then lift and fit the tubes to the side panels and fasten all elastics. Do the same for the other bed. Then secure the elastics on the roof. Tighten the roof with the ropes, fastening one end first temporarily then tighten the other end, go back to the first end and re-tighten. To close the Dandy, reverse this order, remember to re-attach the nylon ropes to the roof cleats so that they will hold the roof up while you are dropping the front and rear sections. ~~Press the buttons and~~ lower the roof holding tubes. Hold the roof clear with the one hand while lifting the bed with the other hand, then lift and lower the left hand bed. This will carry the roof clear. Fold the roof neatly on top of the trailer tucking in the nylon ropes which are now on the cleats for the next time you open.
- 6) To close the front window, you must lift the window fully open to release the ratchets, this applies if you have only opened the window 2-3 inches.
- 7) The door lock has a night latch, this is operated by lifting the black extrusion protruding from the end of the lock.
- 8) Tyre pressures 26lbs.
- 9) The only maintenance on the Dandy are the two grease nipples on the sliding brake mechanism. Grease the compensator in the middle of the axle once a year. Hub caps should be checked for grease once a year.
- 10) Turn the main mattress daily to ventilate.

Separate instructions provided for the Annex.



(1) Set Dandy level. Pull out jacks (self adjusting). Remove cover

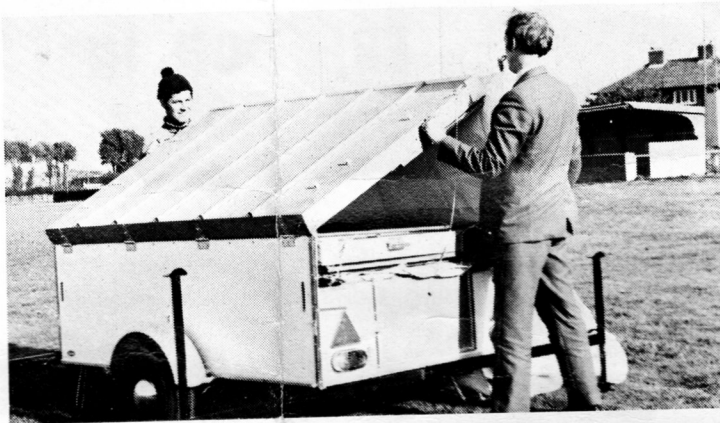

(2) Drop roof to ground on offside. Open first bed



(3) Note the roof, self erecting and always covering the trailer



(4) Open second bed (note mattresses still in position undisturbed)




(5) Pull up door section and open door. This automatically locks upright.



(6) Push up front section with roof pole and fix in socket



(7) Lift up side boards and hook in side panels

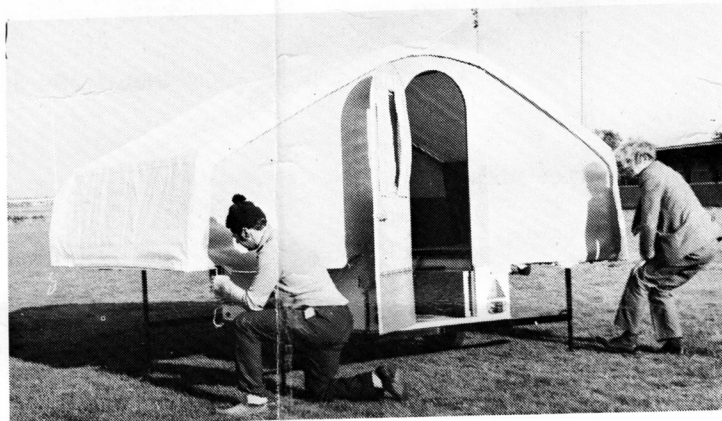

(8) Fasten elastics and roof ropes